

LODDON VALE INDOOR BOWLING CLUB

Digital Operations Manual

DS-01 Projector Operating Guide

Version 2.0 (Draft)

Prepared by Tom Regan-Atkins

Quick Start

Experienced users can normally complete the process in under two minutes.

1. Switch on the Epson projector using the remote control.
2. Wait for the projector to finish starting.
3. On the office laptop, launch Epson iProjection.
4. Tick the projector and click Connect.
5. Open <https://lvibc.co.uk/loddonvale/scoreboard-tv.html>
6. Return to the seating area and press Source Search on the projector remote.
7. Press F11 on the laptop for full-screen display.

Detailed Procedure


Stage 1 – Power up the projector

Stand near the seating rail and point the remote directly at the projector. Press the Power button. The closer you are, the more reliable the remote response.



Stage 2 – Connect the office laptop

If necessary, switch on the office laptop and wait for Windows to load. Search for 'iProjection' in the search bar and launch Epson iProjection.

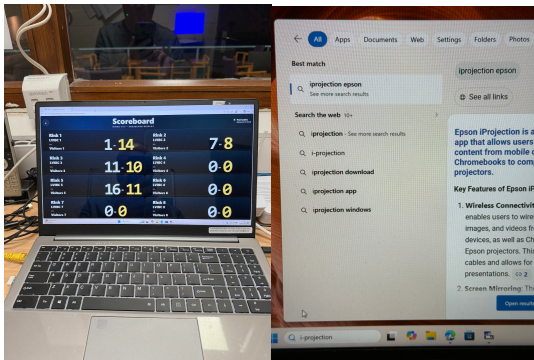

Stage 5 – Display the image

Return to the seating area. Press Source Search on the projector remote. The projector should now display the laptop. Press F11 on the laptop to enter full-screen mode.



Troubleshooting

Problem	Suggested Action
Projector not found	Check projector power, wait 30 seconds and refresh iProjection.
Cannot connect	Ensure the projector is fully started and selected before clicking Connect.
Blank projection	Press Source Search again from the seating area.
Scoreboard not shown	Open the dedicated scoreboard-tv.html page.
Image not full screen	Press F11.

Revision History

Version	Date	Changes
2.0 Draft	July 2026	Initial draft layout.